

SAVE THIS MANUAL FOR FUTURE REFERENCE

GENERAL SAFETY RULES

WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS



AREA OF USE:

- Keep surrounding area clean and well lit. Cluttered areas invite accidents.
- Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.



ELECTRICAL SAFETY

- Do not override the timer switch.
- Do not operate in standing water
- Do not overload
- Do not cut-off or restrict air circulation
- Do not expose MaxxDryLR™ to rain or snow
- Use of attachments not recommended or sold by MaxxDry may result in a risk or fire, electric shock, or injury to persons.
- To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting unit.
- Make sure cord is located so that it will not be stepped on, tripped over, or other wise subjected to damage or stress
- An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire, electric shock or electrocution.
- Two-wire cords can be used with 2-wire or 3-wire extension cords. Only round jacketed extension cords should be used and we recommend that they be listed by Underwriters Laboratories (U.L.). If the extension is to be used outside, the cord must be suitable for outdoor use. Any cord marked for outdoor use can also be used for indoor use. The letters “W” or “WA” on the cord jacket indicate that the cord is suitable for outdoor use.
- An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety, and to prevent loss of power and overheating. The smaller the gauge number of the wire, the greater the capacity of the cable; that is, 16 gauge has more capacity than 18 gauge. When using more than one extension to make up the total length, be sure each extension contains at least the minimum wire size.

OPERATING INSTRUCTIONS

- 1.) Plug the MaxxDryLR™ into any standard 120 Volt 60 Hz electrical outlet.
- 2.) Install one or two extension tubes depending upon type and size of boot or wader.
- 3.) Carefully slide footwear, wader or hip boot onto drying tube being cautious not to restrict air flow at the bottom.
- 4.) Select the heat or no heat setting by pressing the rocker switch at the bottom of the motor housing.
- 5.) Turn timer knob clockwise to 180 minute mark to initially activate the timer switch, then turn knob counter-clockwise back to desired drying time.



Helpful Tips:

- 1.) Roll edges of tall waders up to prevent the restriction of airflow. The natural flow of warm air out the bottom of the waders will dry the rolled edges.
- 2.) Footwear should be dried after every use to help prevent bacteria and fungus growth.
- 3.) Smaller footwear and garments will dry quicker than larger items.

Operation Time:

- 1 to 3 hour – avoid over-drying!
- Drying time varies depending upon extent of moisture as well as temperature and humidity
- We recommend a minimum of one hour every time your boots are used.
- While operating, the unit produces minimal noise. This is a normal condition and does not indicate a problem.

Maintenance:

Use only mild soap and a damp cloth to clean the MaxxDryLR™. Never let any liquid get inside the motor; never immerse any part of the motor into liquid.

IMPORTANT: To assure product SAFETY and RELIABILITY, repairs and maintenance (other than those listed in this manual) should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.

Lubrication:

MaxxDry products are properly lubricated at the factory and are ready for use.

Accessories:

Recommended accessories for use with your MaxxDryLR™ are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: 1888-330-9452. CAUTION: The use of any accessory or attachment not recommended may be hazardous and may void warranty.

Service Information

MaxxDry Service Center is staffed with trained personnel to provide customers with efficient and reliable product service. Whether you need technical advice, repair, or genuine factory replacement parts, contact; Eric Ferguson/ Electric Innovations at the MaxxDry service center at: electricinnovations@roadrunner.com

Full One-Year Use Warranty

MaxxDry (U.S.) warrants this product for One Year against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges, only, is to return the product to the retailer from whom it was purchased (provided the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges. The second option is to take or send the product (prepaid) to a MaxxDry authorized Service Center for repair or replacement at our option. Proof of purchase may be required. This warranty does not apply to accessories. This warranty give you specific legal rights and you may have other rights which vary from state to state. Should you have any questions, contact the service center. This product is not intended for commercial use.

The following will not be Covered Under Warranty:

- Any modification to MaxxDryLR™
- Product has been misused or improperly cared for
- Products over 1 year from date of original purchase
- Warranty request without original receipt
- Repairs done by anyone other than MaxxDry or MaxxDry authorized repair facility

In considerations of the above promises by MaxxDry™, the buyer agrees to and accepts the following conditions:

- 1.) That this warranty is in lieu of all other warranties, expressed or implied
- 2.) That all warranties OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE ARE HERBY EXCLUDED OR WAIVED.
- 3.) That the buyer's sole remedy shall be to obtain replacement of the product free of charge from MaxxDry™ provided any and all warranty defects falls within the warranty period and meets all warranty provisions, and
- 4.) That this remedy is in lieu of all other remedies or claims for damages, consequential or otherwise, which the buyer may have against MaxxDry™.

www.maxxdry.com

MAXX DRY^{LR}

Model MX00205 Wader Hip Boot Dryer



INSTRUCTION MANUAL

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON PLEASE CALL**

1-888-330-9452

**IF YOU SHOULD HAVE A QUESTION OR EXPERIENCE
A PROBLEM WITH YOUR MaxxDry PRODUCT
CALL 1-888-330-9452**

Before you call, have the following information available, MODEL No., Store receipt with purchase date. In most cases, a MaxxDry representative can resolve your problem over the phone, and if not can direct you to a authorized service center. If you have a suggestions or comment, please send it via email to: info@maxxdry.net your feedback is vital to MaxxDry.