



OWNER'S MANUAL

POWER MUFFS

Increases Hearing

- Up to nine times with 50 dB of power for the highest rating in the industry.

Protects Hearing

- Sound Activated Compression (SAC) circuit helps protect hearing from harmful loud sounds, by reducing the amplification of those sounds to a safe level. Noise Reduction Rating (NRR) of 24 dB is among the highest in the industry.

Adjustable Frequency Tuning (AFT)

- Two independent AFT controls allow the user to focus on specific sound frequencies for crystal-clear reception in any situation. The AFT control allows the user to fine tune the bass/treble balance.

Volume Controls & Directional Sound

- Two independent volume controls allow for total adjustment of the four wind resistant high frequency microphones.

Adjusting the AFT


The adjustable Frequency Tuning (AFT) knob is located directly behind the volume control. The AFT dial operates independently from the volume control and enables the user to adjust the sound frequencies to his/her individual levels.

1. Place the Walker's Power Muffs™ on your head, with red volume control on right ear and the blue volume control on left ear, adjust the padded headband to create a comfortable fit.
2. Turn on the power to your Power Muffs™ and adjust the volume to a comfortable level.
3. To increase the higher frequency sounds in your right ear, rotate the AFT control forward (toward your nose).
4. To increase the higher frequency sounds in your left ear, rotate the AFT control backward (toward the back of your head).

That's it! A custom adjustment any time, every time. No matter where you are or how you are using your Power Muffs™, with the improved AFT control, you're sure to have the custom sound that meets your needs.




Identifying Muff Components

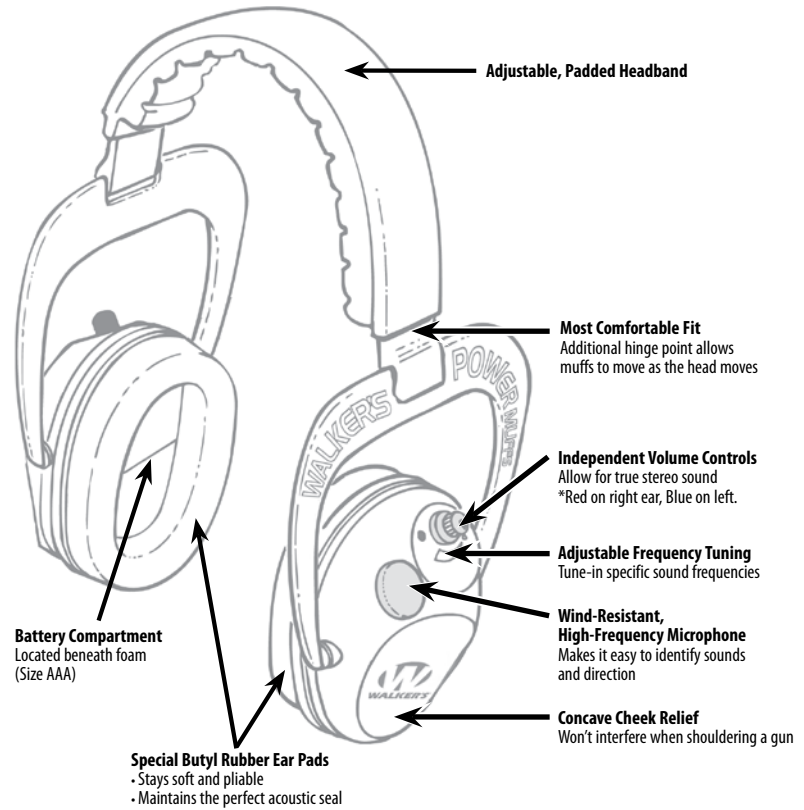

Adjusting the Headband

Power Muffs come with independent headband and ear muffs adjustments. Size the Power Muffs to comfortably fit your head by sliding the ear cups in or out of the headband. The ear cups should fit comfortably, completely surrounding your ear to get the perfect acoustic seal.

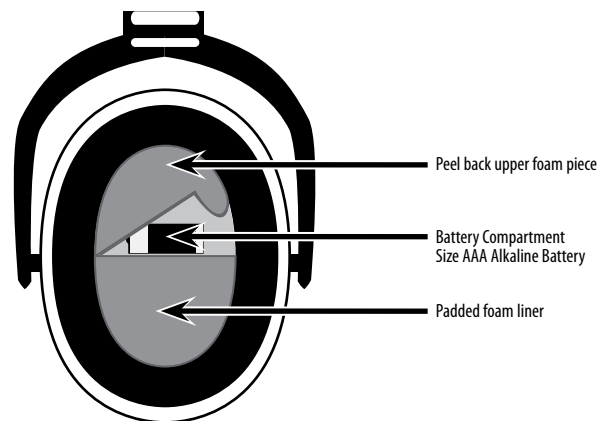

Replacing The Battery

The battery compartments are located under the padding on the inside of each ear cup. The padding is cut for easy access. Remove the battery from compartment and replace with two new Size AAA Alkaline batteries. Note the direction of the positive (+) and negative (-) poles.

Trouble-Shooting Your Power Muffs™

If you experience problems, see possible cures below.

Symptom	Cause	Possible Cure
Dead	Battery is dead	Replace battery
Not Loud Enough	Battery is dead	Replace battery
Intermittent (goes on and off)	Battery is defective	Replace battery
Not Clear, Distorted	Low battery	Replace battery
Motor-boating Sound	Low battery	Replace battery

If Your Power Muffs™ Whistle

Whistling may sometimes occur when you wear your Power Muffs™ with the power tuned on. Whistling generally occurs if the volume level is set too high. Turn the volume level down until the whistling stops.

Caring For Your Power Muffs™

Remember that your Power Muffs™ are a quality instrument and should be treated in the same careful manner as any other precision-engineered device.

1. Never allow any liquid to enter the Power Muffs™ as this may damage the components within the device.
2. Do not store your Power Muffs™ in any location which would expose it to excessive heat (for example, in direct sunlight, near car dashboards, heaters or radiators).
3. Be careful not to drop your Power Muffs™ as this may damage its components.
4. Never insert any foreign objects into your Power Muffs™. This could result in serious damage to the instrument.
5. Never permit solvents to come into contact with your Power Muffs™ as this can damage the units.
6. Clean your Power Muffs™ by wiping with a damp cloth moistened with a mild cleanser.

LIMITED WARRANTY

Walker's warrants this product to the original purchaser to be free from defects in materials and workmanship, under normal use and conditions for a period of two years parts/90 days labor from the date of the original purchase.

Under this warranty, this unit will be replaced or repaired at our option, without charge for parts or labor, excluding batteries, for a period of 90 days after the purchase. After 90 days, the cost of labor with Shipping/Handling and Insurance of \$99.95 is the customer's responsibility. Copy of original receipt may be required for any warranty service.

This warranty is void if any of the following occur:

1. The warranty card was not sent in at the time of purchase
2. The unit is not owned by the original purchaser at the time of the warranty claim
3. The unit has been tampered with, opened or punctured
4. The unit has been immersed in water or other liquids, allowed to be filled with dirt or dust, or otherwise physically abused
5. The 24-month limited warranty has expired

This shall be the exclusive written warranty of the original purchaser and neither this warranty or any other warranty, expressed or implied, shall extend beyond the 24-month period listed above. In no event shall Walker's Game Ear, Inc. be liable for consequential damages, consequential property damage, or consequential personal injury. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Record serial # for future reference: Serial # _____

Return bottom portion to: Walker's, Inc. • PO Box 535189 • Grand Prairie, TX 75053-5189

Or you can register your product online at: www.WalkersGameEar.com

Warranty Registration

Model: Power Muffs _____ Date of Purchase: _____

Purchased From: _____

City: _____ State: _____ Zip: _____

Primary Use: _____

Your Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Serial #: _____ Email Address: _____